


THOMPSON M1A1 INSTRUCTION MANUAL

FIRE SELECTOR


射擊選擇按鈕

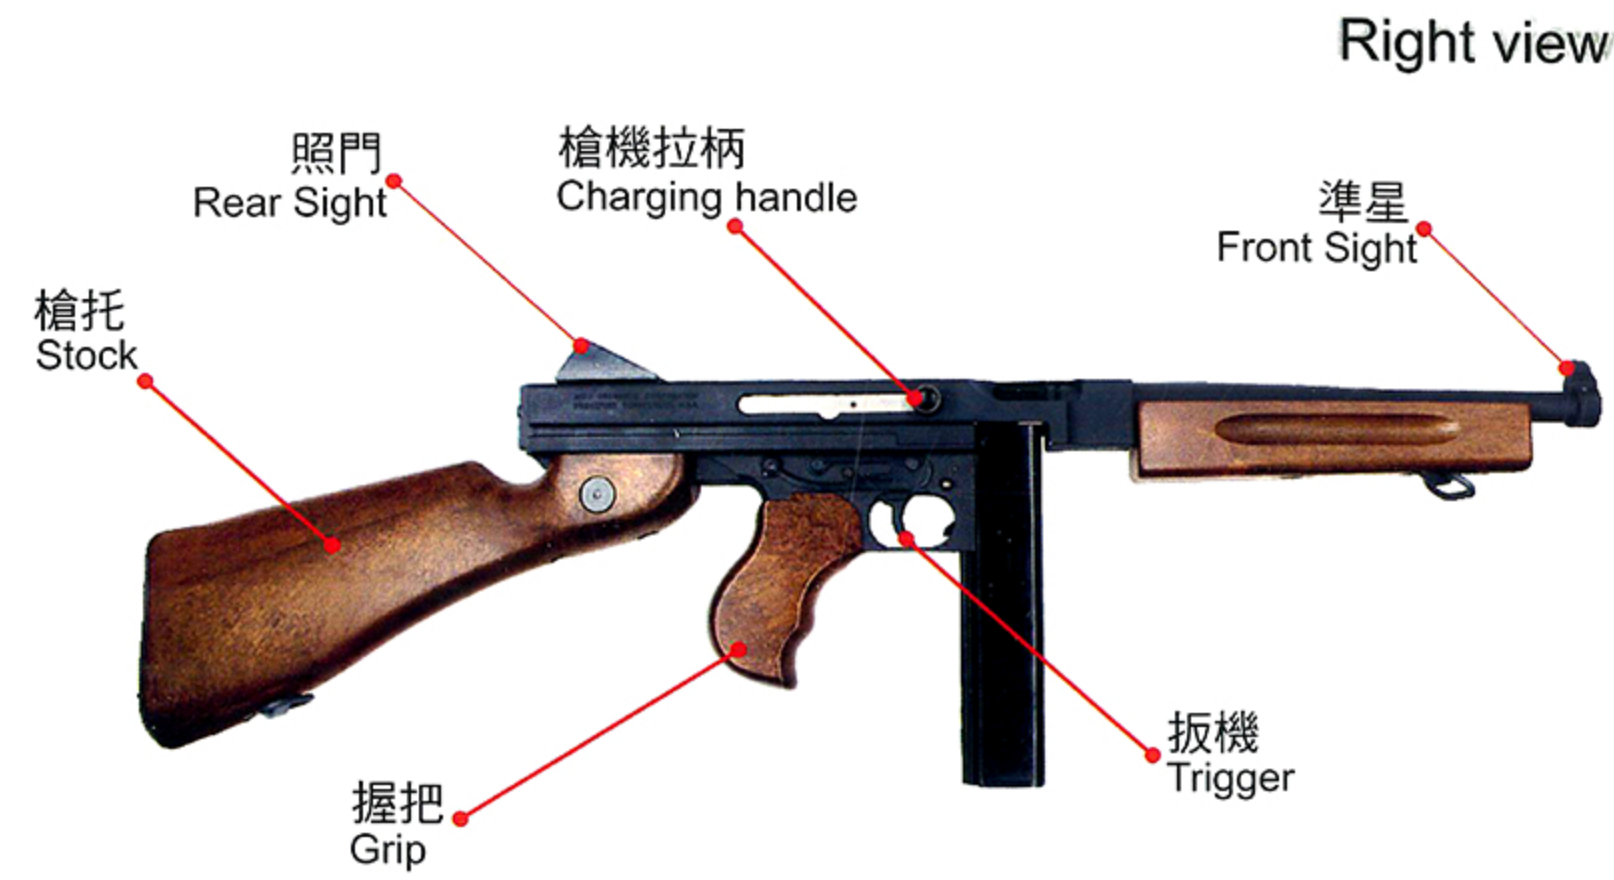

全自動射擊模式 FULL-AUTO Mode
 啟用全自動模式，請將選擇器旋轉到全自動，扣住扳機不放，子彈會連續射擊。
 To enable Full-Auto Mode, rotate the selector to FULL AUTO, bb shooting out continuously as trigger being pressed without release.




單發射擊模式 SINGLE Mode
 啟用單發模式，請將選擇器旋轉到單發，扣扳機，只會單發子彈一粒。
 To enable Single Mode, rotate the selector to SINGLE, only one bb shooting out as trigger pressed.

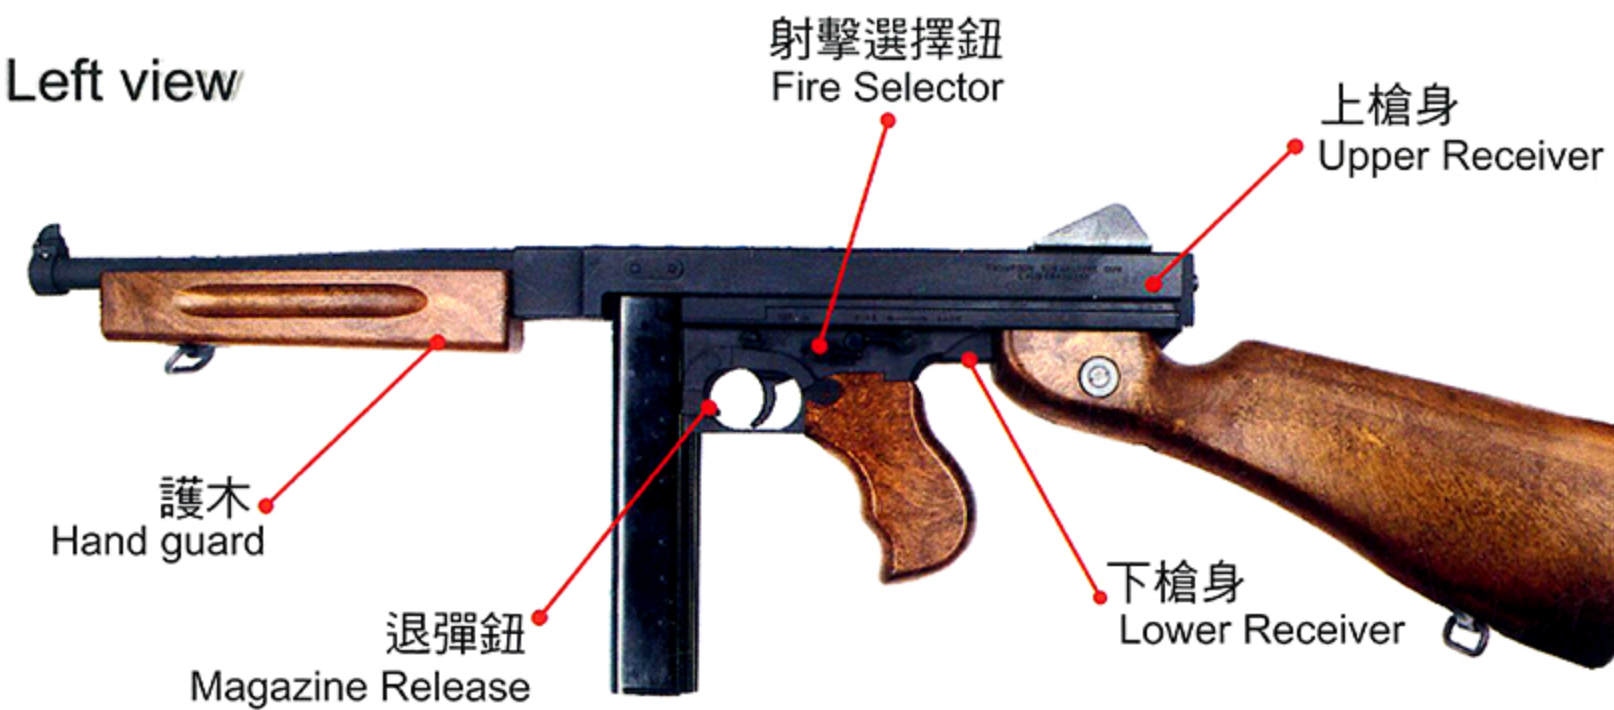

MAGAZINE LOADING

彈匣裝填

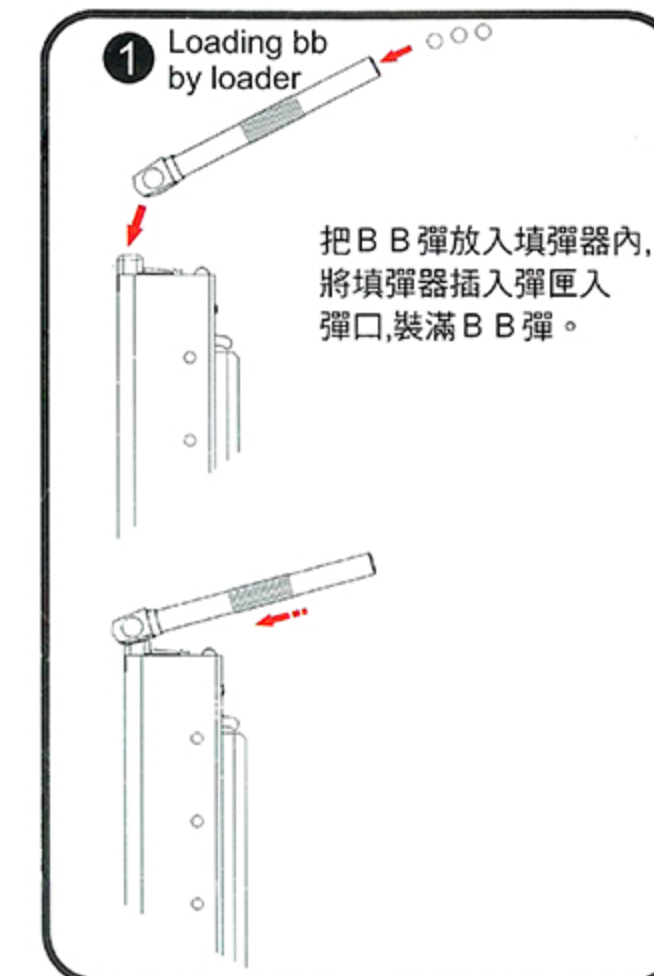

- Safety Reminders:**
- Always keep your gun in safety mode if you do not intend to shoot anything.
 - Keep your finger off the trigger until ready to shoot.
 - Do not point the gun at anything you donot intend to shoot.
 - Always wear eye protection when shooting.



★ OFFICIAL REPLIC ★

- GAS
- 6MM
- HOP UP ADJUSTABLE
- ABS BODY
- 14 J* 339 FPS 103 M/D
- SAFE SEMI FULL AUTO
- BLOW BACK
- METAL PARTS

*TESTED W/0.20g BB.

THOMPSON M1A1

EXPLOSION DIAGRAM

爆炸圖

編號	零件名稱	數量	編號	零件名稱	數量
1	M1A1上槍身	1	56	M1A1退彈鈕拉簧	1
2	PN4 X 13mm	1	57	M1A1退彈鈕附件	1
3	M1A1外槍管	1	58	M1A1握把	1
4	M1A1準星	1	59	M6X90 圓頭一字	1
5	M1A1護木	1	60	M1A1無彈連桿	1
6	M1A1槍身側蓋	1	61	M1A1扳機	1
7	M1A1開門	1	62	M1A1扳機附件	1
8	M3X5 平頭一字	4	63	M1A1扳機彈簧	1
9	M1A1hopup 座右片	1	64	M1A1全自動開關器	1
10	M1A1hopup 座左片	1	65	M1A1槍機釋放	1
11	M1A1內槍管(PDW275)	1	66	M1A1扳機附件托架	1
12	M1A1 HOPUP調整連桿	1	67	M1A1槍機釋放附件	1
13	M1A1 HOPUP調整鈕	1	68	M1A1護木架	1
14	HOPUP緩衝墊	1	69	M3X16 平頭內六角	1
15	M1A1入彈膠	1	70	MSX14 平頭內六角	1
16	O環 2 X 1	1	71	M1A1槍機固定軸	1
17	M2X8 平頭十字	1	72	M1A1槍機釋放軸	1
18	PINX14.8mm	1	73	M1A1槍機釋放彈簧	1
19	真磁後氣閥彈簧	1	74	M1A1槍機釋放附件彈簧	1
20	M1A1活塞前	1	75	M1A1固定彈片	1
21	真磁前彈簧	1	76	M1A1槍托墊片左	1
22	M1A1調節閥	1	77	M1A1槍托墊片右	1
23	O環 7 X 1	1	78	MSX40MM 平頭一字	1
24	M1A1活塞後	1	79	M1A1槍托底座	1
25	O環 17 X 2	1	80	M1A1槍托底座蓋	1
26	M1A1槍機	1	81	M1A1槍托底座彈簧	1
27	M1A1槍機拉柄套環	1	82	M3X3 圓頭十字	2
28	M1A1槍機拉柄	1	83	PIN2.4X15(中需2mm咬花)	1
29	M1A1活塞穩定器左	1	84	M1A1槍托	1
30	M1A1活塞穩定器右	1	85	M1A1彈匣上蓋	1
31	M1A1槍針彈簧	1	86	M1A1氣道橡膠座	1
32	耐磨塊(SVD共用)	6	87	M1A1氣道橡膠(MPS)	1
33	緩衝墊	1	88	氣閥(專用)	1
34	PIN2 X 26.5mm	2	89	延遲滾輪	1
35	M2 X 4 平頭十字	2	90	PIN2 X 20.5	2
36	M1A1覆進彈簧	1	91	M2 X 2.5	1
37	M1A1彈針	1	92	M1A1撥桿控制器	1
38	M1A1覆進彈簧尾蓋	1	93	M1A1撥桿控制器彈簧	1
39	M1A1覆進彈簧後	1	94	2MM鋼珠	1
40	M1A1覆進彈簧中	1	95	M1A1撥桿後	1
41	M1A1覆進彈簧前	1	96	M1A1撥桿前	1
42	覆進裝PU墊	1	97	O環22X1	2
43	M1A1覆進彈簧頭	1	98	M1A1延遲片	1
44	平頭 M2.5 X 10十字	1	99	M1A1延遲片彈簧	1
45	M1A1上槍身後卡榫	1	100	M1A1上彈匣	1
46	M1A1上槍身後卡榫彈簧	1	101	上彈匣彈簧	1
47	M6 X 25一字	2	102	M1A1彈匣	1
48	M4 X 20(平頭自攻一字)	6	103	M4X185MM 連桿螺絲	1
49	M1A1護木扣環	2	104	M1A1彈匣底座	1
50	M1A1護木扣環座	2	105	灌嘴	1
51	M1A1下槍身	1	106	O環3X1.5	1
52	M1A1選擇鈕	1	107	M4X40圓頭十字(半牙)	1
53	M1A1選擇鈕附件	2	108	M6X45圓頭一字	1
54	M1A1保險鈕	1	109	M1A1活塞延遲彈簧	1
55	M1A1退彈鈕	1			

