


爆炸圖 EXPLOSION

PCC


編號	零件名稱
185	下槍身
186	副撞針座
187	PIN 3 x 4.5
188	後定桿彈簧軸心
189	彈匣卡榫
190	螺絲M2.5 x 8(圓頭十字)
191	後定桿
192	後定桿軸心座
193	後定桿軸心
194	副撞針座彈簧導桿

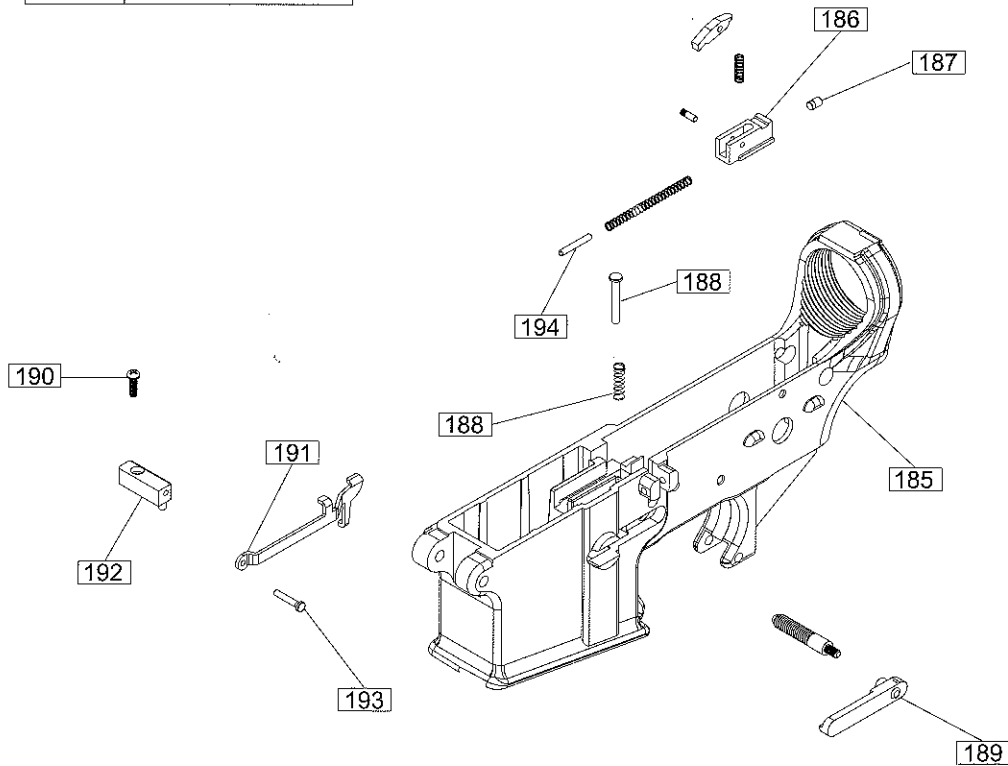

爆炸圖 EXPLOSION

PCC



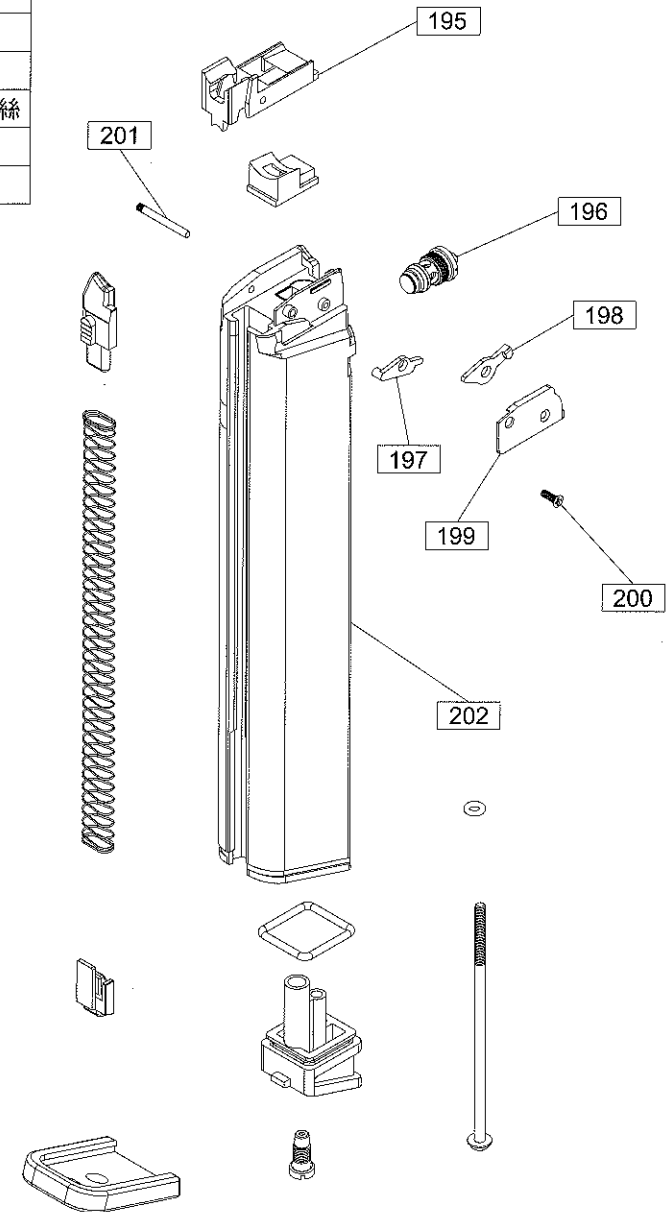









編號	零件名稱
195	氣道橡膠座
196	氣閥
197	彈匣後定桿(前)
198	彈匣後定桿(後)
199	彈匣側蓋板
200	M2X6 十字皿頭螺絲
201	PIN 2 x 19mm
202	彈匣本體



※警告

-  限使用12kg瓦斯 (R22 / Green gas)
-  請勿接近火源 (Never place it near fire)
-  嚴禁存放於高溫環境 (Never store the Magazine above 40°C)
-  請勿烈日曝曬 (Never place it directly under sunshine)

Caution! **VORSICHT**
PRECAUTION Ausschliesslich für diese Pistole bestimmte
NE PAS UTILISER D'AUTRES Munition verwenden. (6.0mm Kunststoffkugeln)
PROJECTILEE QUE CEUX FOURNIS. **Fare attenzione**

<p> ★射擊時最好戴護目鏡</p> <ul style="list-style-type: none"> <input type="checkbox"/> Be sure to wear shooting glasses or Goggle when shooting. <input checked="" type="checkbox"/> Toujours porter des lunettes de tir ou de protection quand vous tirez. <input type="checkbox"/> Zum Schiessen stets eine Schutzbrille tragen. <input checked="" type="checkbox"/> Aseguresse de llevar puestas las gafas de proteccion cuando dispare. <input type="checkbox"/> Assicurarsi di indossare lenti di Protezione quando si spara 	<p>★不用時要把槍置於高處 (小孩拿不到的高處)</p>  <ul style="list-style-type: none"> <input type="checkbox"/> Put the gun beyond the reach of kids. <input checked="" type="checkbox"/> Tenir hors de portee des enfants. <input type="checkbox"/> Pistole immer kindersicher aufbewahren. <input checked="" type="checkbox"/> Ponga la pistola fuera del alcance de los niños. <input type="checkbox"/> Tenere fuori Dalla portata dei bambini.
<p> ★不可用眼睛探視槍</p>  <ul style="list-style-type: none"> <input type="checkbox"/> Don't peep at the muzzle. <input checked="" type="checkbox"/> Ne jamais regarder dans le canon. <input type="checkbox"/> Nie in den lauf schauen. <input checked="" type="checkbox"/> Jamas mire por el canon <input type="checkbox"/> Non guardare mai dentro la canna. 	<p> ★不可朝人射擊</p>  <ul style="list-style-type: none"> <input type="checkbox"/> Don't aim at people even if it is unloaded. <input checked="" type="checkbox"/> Ne jamais viser quelq'un meme si votre pistolet est vide. <input type="checkbox"/> Auch bei spiel-und Sportwaffen besteht Verletzungsgefahr. Auch ungeladen nie auf einen Menschen oder ein Tier richten! <input checked="" type="checkbox"/> No apunte a personas, incluso descargado. <input type="checkbox"/> Non puntare mai verso le persone anche se la pistola scarica.
<p>★射擊的瞬間，才可以把手指接近扳機擊扣</p>  <ul style="list-style-type: none"> <input type="checkbox"/> Don't touch the trigger until the moment of shooting. <input checked="" type="checkbox"/> Ne jamais appuyer sur la gachette le rearmement. <input type="checkbox"/> Abzug erst dann berühren, wenn Sie zum Schiessen bereit sind. <input checked="" type="checkbox"/> No toque el gatillo hasta el momento del disparo. <input type="checkbox"/> Non toccare il grilletto fino al momento di sparare. 	<p>★確定射擊的方向均安全後才可以射擊</p>  <ul style="list-style-type: none"> <input type="checkbox"/> After making sure that there is nobody nearby. <input checked="" type="checkbox"/> Toujours etre sur qu'il n y a personne dans la trajectoire de votre tir. <input type="checkbox"/> Vergewissern Sie sich vor dem Schiessen stets, dass niemand getroffen werden kann. <input checked="" type="checkbox"/> Antes de apuntar aseguese que non hay nadie cerca. <input type="checkbox"/> Assicurarsi semper che non ci sia nessuno sulla trajetoria di tiro.
<p> ★避免粗魯的動作，發生危險</p>  <ul style="list-style-type: none"> <input type="checkbox"/> Avoid a rough operation. <input checked="" type="checkbox"/> Ne jamais jeter le pistolet quand il est arme. <input type="checkbox"/> Geladene Waffe stets mit Respekt Behandln. Nicht werfen oder unsanft Jandhaben. <input checked="" type="checkbox"/> No tire ni lance la pistola, se puede disparar. <input type="checkbox"/> Evitare azioni brusche. 	<p>★不使用時，應將彈匣取出，並取下子彈</p>  <ul style="list-style-type: none"> <input type="checkbox"/> When the gun is not in use, remove the magazine and unload BB pellets. <input checked="" type="checkbox"/> Quand vous ne l'utilisez plus, bien Faire attention de retirer le chargeur et de le desarmer. <input type="checkbox"/> Zum Aufbewahren Magazin entfernen und Kugeln herausnehmen. <input checked="" type="checkbox"/> Cuando no se este utilizando la pistola, saque todas las bolas. <input type="checkbox"/> Quando l'arma non e in uso, estrarre il caricatore e scaricare i pallini.

★正確使用空氣軟槍，可享受愉快的射擊，但是錯誤的使用方法非常危險，務必遵守注意事項。
 Miss handle the airsoft gun may condition serious injure or death. Please read the safety instruction before use.



MADE IN TAIWAN

① 各部名稱 NAME OF PARTS

M4




CQBR



①


① 各部名稱 NAME OF PARTS

M16 A3

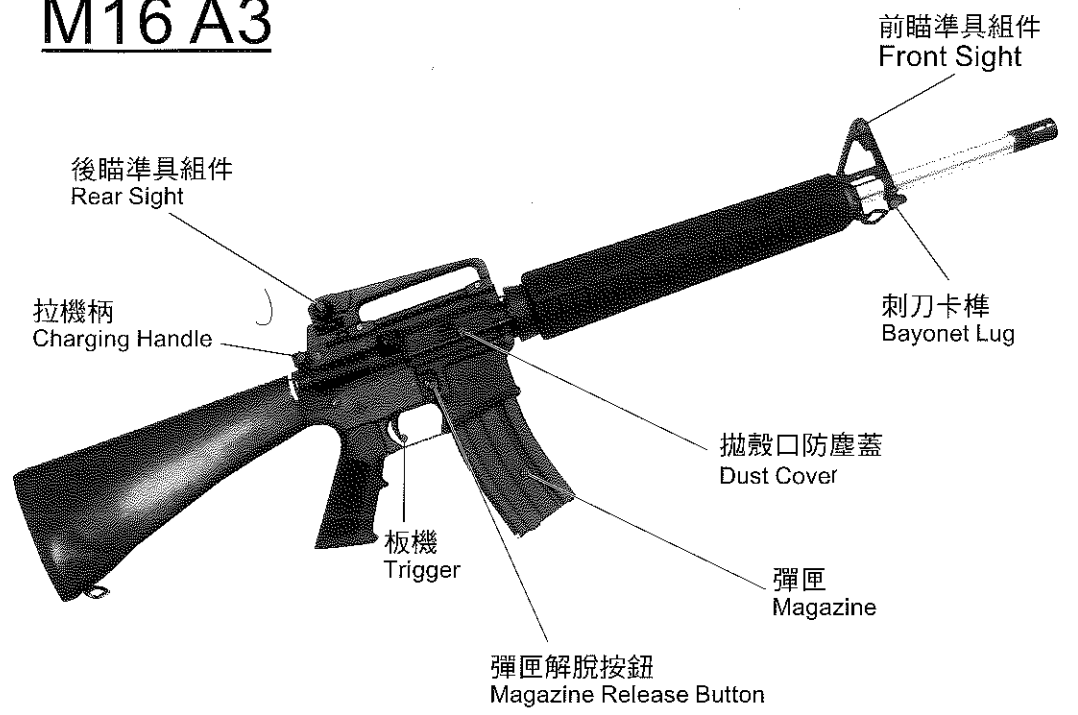

②

② 彈匣裝填 MAGAZINE LOADING

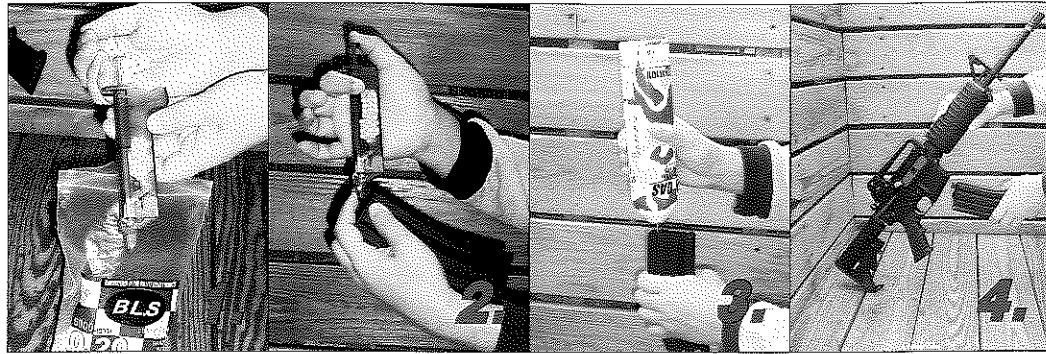


將6mm BB裝填入附贈的填彈器中
Fill 6mm BBs with loader.

將彈匣入彈口插入填彈器壓下填彈桿裝入BB彈到滿
Push loading rod 6 times to fill around 30 BBs into the magazine.

將瓦斯由底版注入孔灌入
Fill gas from bottom of magazine.

將裝填好BB彈與灌好瓦斯的彈匣插入槍上完成裝彈手續
Loading magazine and ready to shoot.


③ 槍枝上膛發射前準備 PREPARE FOR SHOOTING

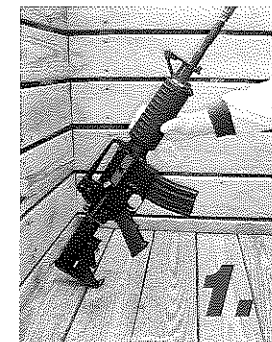


插入充填完BB彈與瓦斯的滿彈匣
Insert the loaded magazine into the lower receiver.




拉拉柄向後到底
Pull the Charging handle to the end.

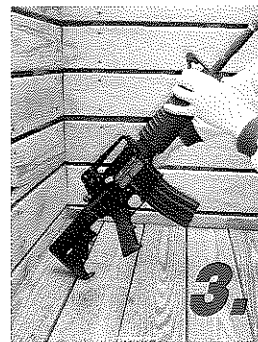

猛然放開拉柄讓槍機復位推BB彈上膛
Quick release charging handle for loading BBs into the Hop bucking.

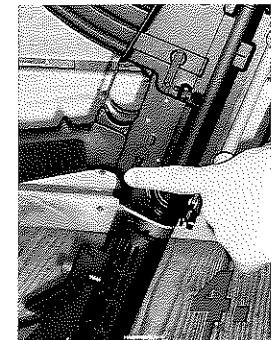


將保險鈕轉至保險(SAFT)位置
Set the fire selector to SAFE position.

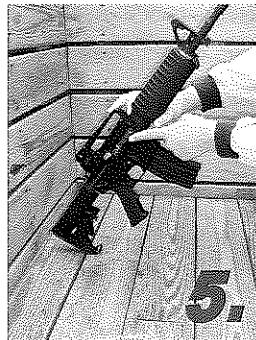


關閉防塵蓋
Close the dust cover.


④ 槍枝大部分分解 Field Strip

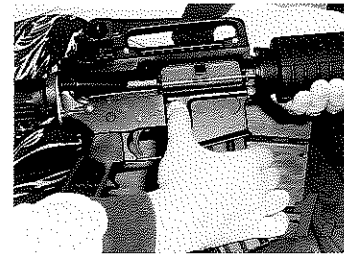


壓下彈匣卡榫
Push magazine release button

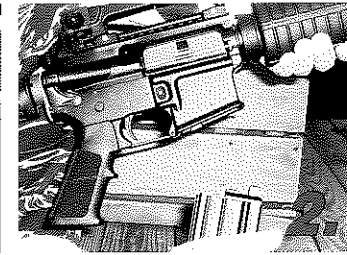


向下取出彈匣
Take down the magazine

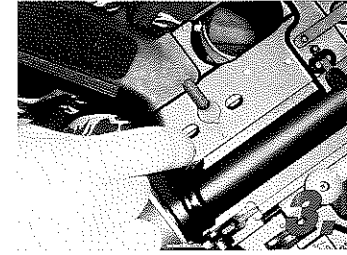


從槍身左側推出後節合銷
Push the rear locking pin from left side

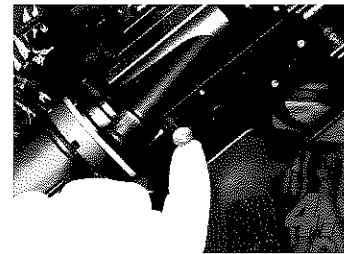

再從右側完全拉出後結合銷
Pull the rear locking pin from right side.

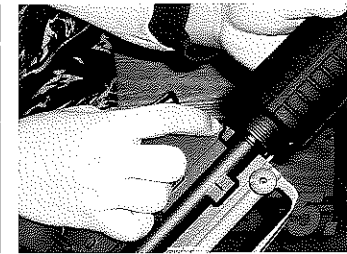


從槍身左側推出前節合銷
Push the front locking pin from left side.

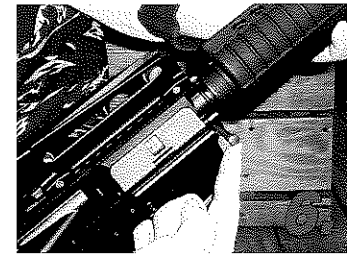

再從右側完全拉出前結合銷
Pull the front locking pin from right side.



拉出三分之二拉柄向後拉出槍機
Pull out half the charging handle with bolt. Remove the bolt carrier first and charging after.


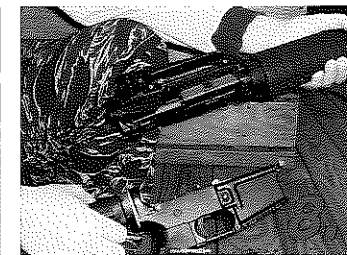


將上下槍身分開
Take down the lower receiver



大部分解完成
Done


爆炸圖 EXPLOSION (OPEN-BOLT)

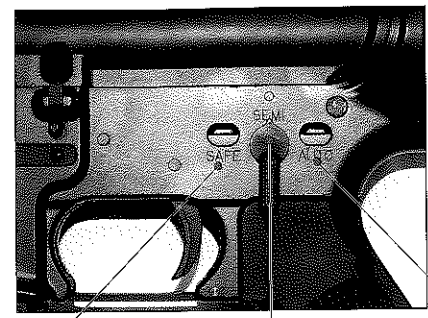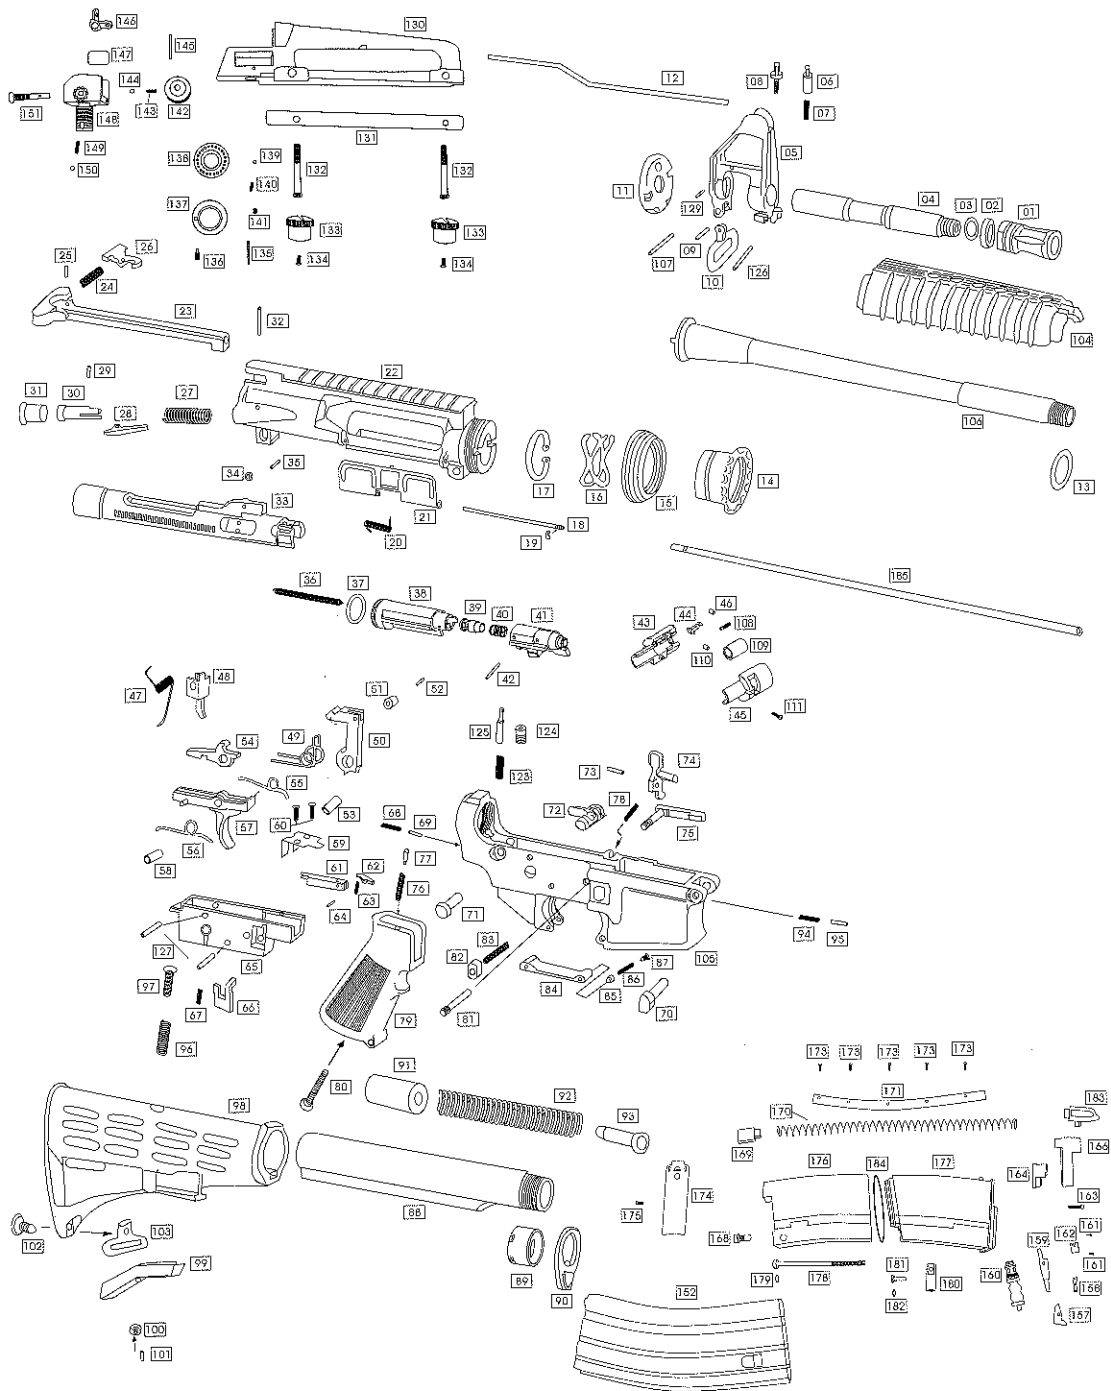



保險控制
Safe control

半自動控制
Semi-automatic control

自動控制
automatic control

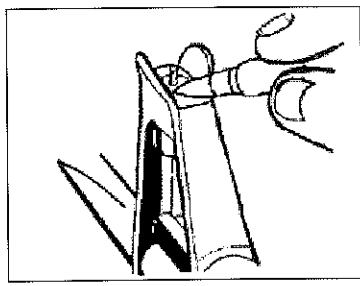

準星的調整
To adjust front sight

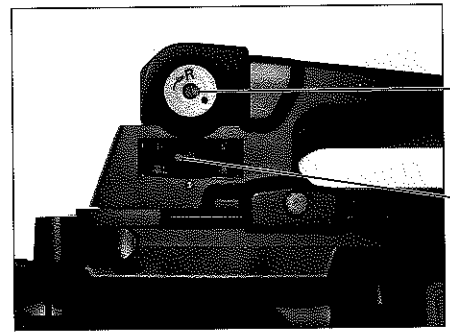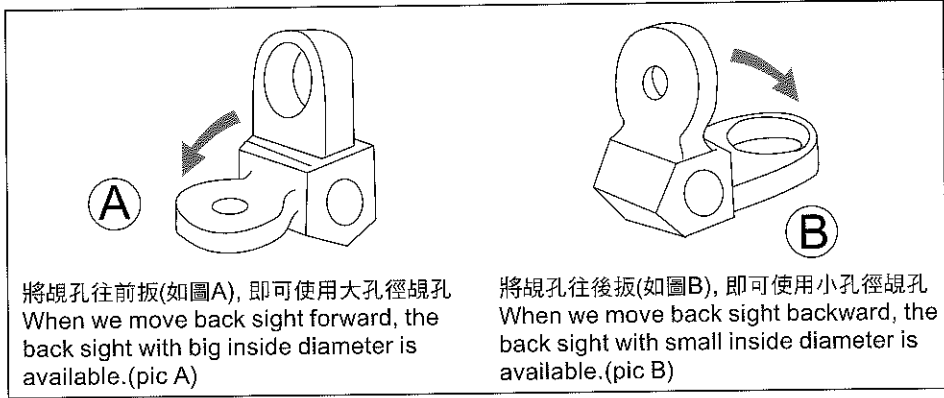

將覘孔調整鈕往順時鐘或逆時鐘, 即可左移或右移覘孔
Turn adjusting knob counterclockwise or clockwise to move backsight left or right.

將覘孔調整鈕往順時鐘或逆時鐘, 即可向上或向下移覘孔
Turn adjusting knob counterclockwise or clockwise to move backsight up or down.